



# SDiPS between walls or columns

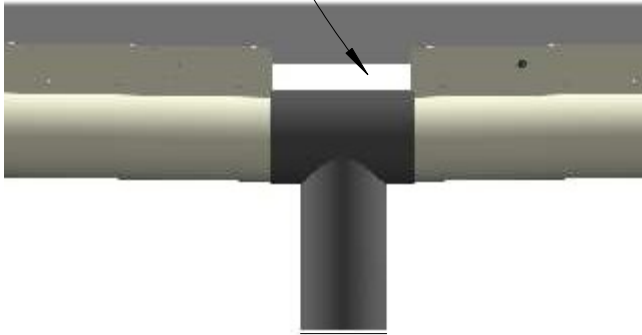

Slope SD90 to middle or one end. Join SD90 to standard Tee or Elbow.

*Use timber as form here to continue channel over tee or elbow.*

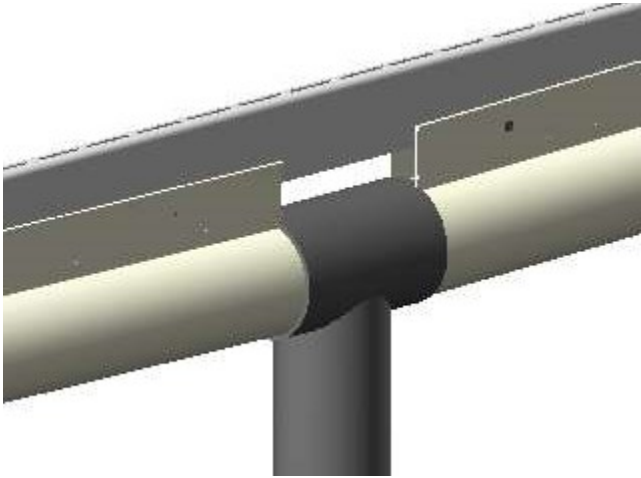

Trim SD90 channel section back from pipe section and use timber to form channel over standard tee or elbow.

Provide a clearout or IO down stream for maintenance.

